


# **TVC-B10**

# 10A dual speed controller RC tracked vehicles

The controller contains all components for controlling two DC motors in a tracked vehicle.

The behavior of the integrated mixer can be set for different vehicle types. The controller can thus be set for full tracks, half tracks and wheeled vehicles with differential drive. In addition, there are variants for historical tracked vehicles without tableturn as well as the possibility of inertia simulation.

The controller is equipped with BEC and has an EMK brake, which is released in the middle position of the throttle and steering stick. The braking effect can be set either via an RC channel, or fixed.

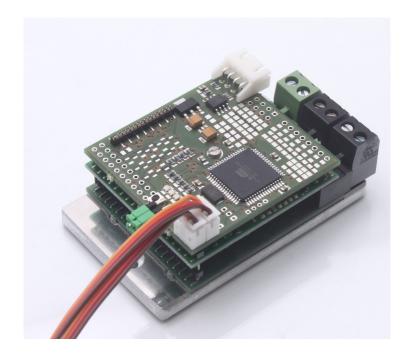



### 1 Note

Installation of the module requires intermediate to advanced modeling skills. Soldering skills are required to connect the wiring. Inexperienced modelers and persons aged under 16 years old should seek the assistance of an experienced modeler. Always switch off power when working on the wiring. Especial take care when connecting more than one receiver energy source. Prevent the device from getting wet. Check loads before connecting them to the modul at a current limited, or fuse protected source.



# **Contents**

1	Note	2				
2	Introduction2.1 Technology	<b>5</b> 5 6				
3	Functional description  3.1 Manual control	<b>7</b> 7 7 7				
4	Einbau4.1Battery connection4.2Connecting the motors4.3Connecting the servo cables4.4BEC jumpers4.5Scalebus operation (optional)	8 8 8 9 10				
5	Commissioning  5.1 Startup	12 12 13 13 14 14				
6	Glossary of terms					
7	Technical data	18				
8	Important8.1 Warning8.2 Environmental protection8.3 Address8.4 Contact					



	Document date	
List(	of Figures	
1 2 3 4 5	Assignment of the connector for power supply pinout servo cable	9 9 10
List(	of Tables	
1 2 3 4	servo cable assignment	13



### 2 Introduction

The controller is designed for an input voltage range from 6.5V to 24V. This means that the controller works with the 6 cell NC packs commonly used in the RC car sector, but also with lead batteries up to 24V. Two standard automotive fuses protect the model and the battery from excessive currents.

The controller has a built-in BEC circuit to power the receiver from the drive battery.

Please note that the removable BEC current decreases as the supply voltage increases.

To disconnect the internal BEC regulator from the receiver supply, a jumper must be removed.

As a failsafe function, an extensive plausibility check of the transmitter signals is integrated in the software.

In addition, the controller has a temperature monitoring of the output stage.

It switches off at 75°C and can be switched on again at 65°C and above.

To do this, the transmitter sticks must be set to the neutral position to prevent a sudden start after the controller has cooled down.

# 2.1 Technology

The controller is microprocessor controlled. The processor works with 16MHz clock frequency.

The output stage is constructed from N-channel MOSFETs, which have an inrush resistance of only 0.008 ohms and a continuous current capability of 60A. To make effective use of the low internal resistance, the output stage transistors are driven by sophisticated MOSFET push-pull output stages with integrated charge pump.

Under normal ambient conditions, a continuous current of 10A is achieved. The controller operates with a PWM frequency of 16kHz.

reicht. Der Regler arbeitet mit einer PWM-Frequenz von 16kHz.



# 2.2 Scope of delivery

The controller is supplied with the connectors for the motor connection and the battery connection.

# 2.3 options

- 10 controllable light outputs for brake light, reverse light, turn signal, warning light, RKL, low beam and high beam.
- · Lipo single cell monitoring
- RC channel adjustable standstill brake



# 3 Functional description

#### 3.1 Manual control

A radio remote control with at least one proportional channel is required to control the module. To use all functions, four RC channels are required.

### 3.1.1 Channel 1 - proportional forward/back

Direction of rotation for the motor. From the throttle channel is also derived reverse light on/off, brake light).

#### 3.1.2 channel 2 - proportional left/right

The control of the turn signals is derived from this channel. It is usually connected to the steering channel with a V-cable, parallel to the steering servo. If the channel is not connected, the turn signals only function as warning turn signals.



# 4 Einbau

### 4.1 Battery connection




Figure 1: Assignment of the connector for power supply

Power is supplied via the green, plug-in screw terminal. Please pay attention to the correct polarity of the supply voltage! (see figure 1).

It makes sense to include a switch in the positive supply line to the battery to switch the model on/off. Never switch the minus in RC model building, because the minus also the reference potential of the servo signals.

There are two automotive fuses for the motor output stages on the circuit board. They are pluggable and can be easily replaced if necessary.

If one of the power stage fuses has blown, the BEC still works and the LED indicates the function. However, the corresponding motor output stage no longer supplies power. In addition, the BEC circuit also has a fuse. This is soldered onto the circuit board. If this fuse has blown, the BEC no longer supplies voltage and the controller no longer shows any function.

# 4.2 Connecting the motors

Black, plug-in screw terminals are provided for the drive motors. One motor is connected to each screw terminal. The motors must be radio interference suppressed, as is usual in model building.

# 4.3 Connecting the servo cables

The controller is equipped with JR servo cables. The pinout is shown in figure 2.







Figure 2: pinout servo cable

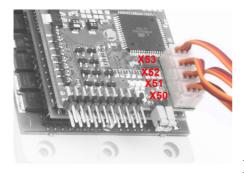

chan- nel	connector	optional	Function
1	X50	no	throttle
2	X51	yes	steering

Figure 3: servo cable position

Table 1: servo cable assignment

# 4.4 BEC jumpers


The controller contains a BEC circuit that generates a regulated voltage of 5V from the voltage of the drive battery to supply the receiver and servos.

Since in function models often several controllers with BEC are installed, but the parallel operation is problematic under certain circumstances, the connection of the installed BEC to the receiver can be disconnected. Two green jumpers are used for this purpose.

If the jumpers are inserted vertically, the internal BEC voltage is passed on to the receiver and from there to the servos.

If the jumpers are inserted horizontally (or are not inserted), the voltage is not passed on. In this case, another module must supply the receiver with power.



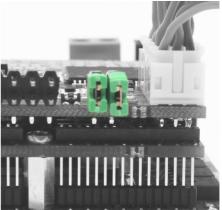

to receiver

Figure 4: do not forward BEC voltage Figure 5: forward BEC voltage to receiver

#### 4.5 **Scalebus operation (optional)**

As an alternative to control via the receiver and the servo cables, the controller can also be controlled via the scale bus. To do this, the controller is connected to the other modules with the scale bus cable (white, four-pin connector).

For example, the FO module TVC-MF-10 can control the controller. The controller switches to scale bus mode if no servo signal is present at the two servo cables when it is switched on. Accordingly, the servo cables must not be plugged into the receiver during scale bus operation.

In scale bus mode, the controlling module specifies the mixing function. Therefore, a controller for a half-track vehicle can also be operated with an FO module for a battle tank.

The controller then works as a full track mixer.

Not only the information for controlling the drive motors, but also the information for the auxiliary drives is sent via the scale bus.

If no jumper is plugged in, the information of the drives is output.

If coding bridges are plugged into servo cables 1 or 2, the motor outputs



are controlled as specified in the description of the FO module.

### **Example tracked vehicle:**

- 1. No coding jumper plugged
  - → Controller works as drive controller (drive chains)
- 2. coding jumper plugged into servo cable 1
  - → Controller works as tower control (barrel elevation and tower rotation)

It is of course possible to connect several controllers to the scale bus. It is also possible for two controllers to output the same information.



# 5 Commissioning

### 5.1 Startup

- 1. Connectconnect the drive battery on the transmitter the throttle and control levers to the center position (the corresponding trim as well). on the receiver. The green LED lights up for approx. 1s.
- The green LED on the board flashes until the controller has detected the center position of the channels. If zero point detection is not possible, the LED does not light up. The zero point is not determined again until the receiver is switched on/off.
- 3. If the green LED is continuously on, the vehicle is ready to drive.

This automatic calibration is done in this way at **every** switch-on. I.e., the position detected at power-up is stored as the neutral position. This applies to both steering and speed.

# 5.2 Correct driving direction

The direction of travel depends on the mechanical arrangement of the engines in the vehicle. Usually, the motors are mounted so that the motor shafts are in opposite directions. As a result, the motors must be connected with different polarity in order to drive in one direction.

Of course the correction of the driving direction can be done directly on transmitters with the servo reverse setting. If the transmitter does not have this possibility, you can proceed as follows:

- 1. *model moves forward when steered backward and vice versa*: Change connections on both motors (reverse polarity).
- 2. *Model moves left when steered to the right and vice versa:* Change connections from both motors, reversing polarity. (connecting line from motor 1 to motor 2 and vice versa).
- 3. The directional control is set to neutral, but the model does not drive straight ahead: Correct with steering trim



### 5.3 EMF brake

The controller has an adjustable EMF brake. It is activated by moving the throttle and steering sticks to the center position.

The braking effect with which the brake is applied is indicated by the yellow LED. The longer the yellow LED is on, the stronger the braking effect.

- LED Off corresponds to 0% braking effect.
- LED On corresponds to 100% braking action.

If you want to change the braking effect, you must press the button. The button is located between the light connector and the jumpers for the BEC. Use a thin stick made of plastic or wood to press the button. The push button has a clearly noticeable pressure point.

If you move the throttle in one direction the on phase of the yellow LED gets longer and longer, in the other direction shorter and shorter until it is completely off. The stronger the lever deflection, the faster the adjustment.

The green LED lights up continuously as soon as you take the lever out of the neutral position to indicate that the controller is making a change. If you press the button again, the brake setting is saved and is retained even after switching off and on again.

### 5.4 Error states

Normally, the green LED is permanently on. If the controller detects an error, it indicates this by briefly flashing the green LED n times. In addition, the red LED lights up. All error conditions lead to the motor being switched off.

	fault	Acknowledgement / Troubleshooting	
code			
2 times	no signal from re-	Check receiver and connections / elimi-	
	ceiver	nate radio interference	
3 times	overtemperature	allow controller to cool down	

Table 2: Error codes



# 5.5 Changing the mixing function

Different vehicles and transmission types need different mixers. In the past, we offered different versions of the controller ("OG", "CM", "HT", etc.).

With this controller, you can now define the mixer function yourself. An overview of the available mixers is shown in table 3 on page 15.

**Notes** Note that the maximum current consumption of mixers with tableturn is not significantly higher because the drives work against each other in tableturn.

Be careful when operating with inertia simulation. The vehicle then naturally reacts with a delay to the commands of the radio remote control.

### 5.5.1 How to change mixer function

- 1. Connect everything as described under commissioning and switch on the transmitter.
- 2. press the button when switching on the controller. The setting mode is indicated by the red and yellow LEDs lighting up.
- 3. With the throttle and steering channel you can now select nine positions by setting the sticks in left/right stop or leave neutral position. The position number is indicated by the red LED flashing while the green LED is lit. If the green LED goes out, the cycle starts again.
- 4. For example, if the red LED flashes three times, mixer number three of the table is selected. save this, hold the sticks in position and press the button again.
- 5. Then release the stick. Now the mixer is selected and saved.



Code	drive type	name	table- turn	vehicle type	description
1	full track	simulation superposition gearbox 100%	yes	tracked con- struction machines, modern tanks, snow groomers	Simulation of the driving behavior of a mechanical superimposed trans- mission without limitation of the drive power
2	full track	simulation superposition gearbox 80% / 60%	yes	tracked con- struction machines, modern tanks, snow groomers	Simulation of the driving behavior of a mechanical superimposed transmission with straight-line driving limited to 80% and steering limited to 60%. Only when cornering is 100% given to the drives to account for the increased friction.
3	half track/ wheeled	classic mixer	no	wheeled on- struction machines, halftracks	The chain inside the curve is reduced from 100% to 50% of the driving speed at steering angle
4	full track	mechanical superimposed gearbox	yes	modern tanks, snow groomers	This setting is for mechanical super- imposed gear units
5	full track	no mixer, sin- gle chain con- trol	yes	Operation via manual mixer or mixer in ra- dio	This variant has no mixer, only a brake that acts when both drives come to a standstill.
6	full track	classic mixer with tableturn	yes	tracked con- struction machines, modern tanks, snow groomers	Mixing function as used e.g. by Tamiya
7	full track	classic mixer without table- turn	no	historical construction machinery and tanks	Mixing function as used for example in Tamiya but when cornering the chain does not run backwards.
8	full track	simulation superposition gearbox 100% and inertia simulation	yes	tracked con- struction machines, modern tanks, snow groomers	

Table 3: list of optional mixing functions available



# 6 Glossary of terms

- **BEC B**attery **E**liminator **C**ircuit
  - This circuit replaces a extra Battery needed for the receiver and connected servos, by generating a fixed voltage from the drive battery.
- **ESC** Electronic Speed Controller

  This is a unit to control the speed and direction of a DC motor.
- **LED** Light Emmitting **D**iode
  - A light-emitting diode (LED) is a semiconductor device that emits visible light when an electric current passes through it. Benefits of LEDs are low power requirement and long life. Disadvantages is the more complicated wiring, compared to a classic bulb, it has a polarity and a resistor is needed to limit the current.
- **Scalebus** The Scalebus is a development of **SGS electronic** to connect controllers and modules to compose solutions for complex RC models.
- **SBus** The Sbus has been introduced by **Futaba** to simplify the wiring between RC Receivers and servos / esc.
- **SBus** The SBus was introduced by the company **Futaba** to simplify the wiring between receiver and servos/controllers. This is especially useful for models with many controllers.
- **IBus** The IBus was introduced by the company **Flysky** to simplify the wiring between receiver and servos/controllers. This is especially useful for models with many controllers.
- **SUMD** The SUMD sum signal has been introduced by the company **Graupner** to simplify the wiring between receiver and servos/controllers. This is especially useful for models with many controllers.



Abbre- vation	meaning	explanation
Stick	<b>S</b> tick	Stick not self centering
StickS	<b>S</b> tick	self centering Stick
	<b>S</b> elfcentering	
TSMS	<b>T</b> hree <b>S</b> tage	self centering momentary switch with three
	<b>M</b> omentary	stages
	<b>S</b> witch	
TSS	<b>T</b> hree <b>S</b> tage	switch with three stages
	<b>S</b> witch	
Pot	<b>Pot</b> entiometer	linear- or rotary knob
PotC	<b>Pot</b> entiometer with <b>C</b> enter key	linear- or rotary knob with a center key

Table 4: Abbrevation for the manipulators in the transmitter housing



# 7 Technical data

Rated motor current drive (per mo-	15 Ampere 1 minute: 20 Ampere
tor)	/ 10s: 220 Ampere
Supply voltage (with BEC)	6,5 to 24 V
Allowable BEC current	1000mA short term, 600mA at
	12V, 300mA at 24V
PWM frequency	16kHz
Typical maximum power dissipation	5 Watt
Typical voltage drop in the output	0,15 Volt
stage	
Dimens	75x47x30mm
software version	1.2



# 8 Important

This equipment described above has been tested and inspected for quality and function. And it is intended for installation and use only as described above. This equipment does not contain any user serviceable parts. The supplier accepts no responsibility, financially or otherwise, for damages caused by use or misuse of the equipment described above. The equipment must be protected from exposure to water to prevent short circuit. Do not open the equipment or attempt to change function, wiring, or documentation in any way. Do not connect to incorrect voltage or reverse the battery polarity. Do not use in a careless or abusive fashion around persons or property. Do not attempt to repair. Any legitimate use, e.g. Installation in a model makes the user responsible to ensure that the operating instructions and non-liability agreement are provided to the purchaser of the module described above.

Do operate the device only in the permissible operating conditions. Do not make any changes to the controller through. The device shall not be exposed to splashing water or rain (causing a short circuit).

# 8.1 Warning

Due to choking hazard caused by small parts that may be swallowed, this product is not suitable for children under 6 years of age.

# 8.2 Environmental protection

For defective devices, repair is possible in many cases. Please contact us. If you do decide to dispose of the device, you will be making a contribution to environmental protection if you return the device to a municipal collection point for recycling. Electronic devices do not belong in household waste.



### 8.3 Address

SGS electronic Zeppelinstraße 36 47638 Straelen Germany / Europe

#### 8.4 Contact

Web www.sgs-electronic.de Email info@sgs-electronic.de

Ust-IdNr.: DE 249033623 WEEE-Reg.-Nr.: DE 90290947

#### 8.5 Document date

This document was created on 2024-02-17 12:19:00+01:00

### 8.6 Documentation

We reserve the right to make updates, changes or additions to the information and data provided.

The documentation that accompanies your product applies.

Please note that documents obtained later via download may not correspond to the status of your module.